

# Glyphosate Strip Test 500098/500095


## 1. Collect Sample/Extract





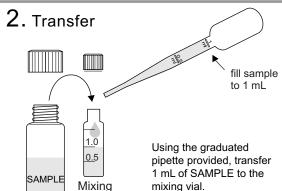


### 4. Add Mixture to Derivatization Vial

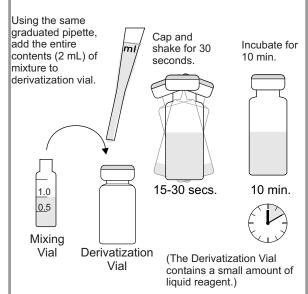





Vial

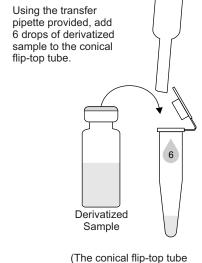

#### 6. Shake and incubate

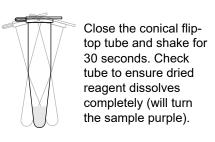




## 7. Test

Insert test strip into conical fliptop tube with arrow pointing down (sample pad down).


Incubate for 10 minutes.

8. Dry
Remove test strip. Lay

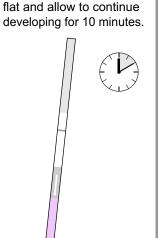

## 9. Interpret

contains dried reagents.)

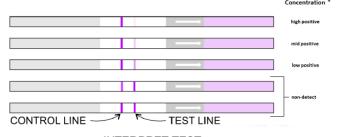

#### INTERPRET TEST

CONTROL LINE	TEST LINE	INTERPRETATION
NO CONTROL LINE PRESENT	NO TEST LINE PRESENT	INVALID RESULT
CONTROL LINE PRESENT	VERY FAINT TEST LINE OR NO TEST LINE PRESENT	HIGH CONCENTRATION
CONTROL LINE PRESENT	MODERATE INTENSITY TEST LINE PRESENT	LOW TO MODERATE CONCENTRATION

\*See appropriate technical bulletin for actual sample concentration ranges in various matrices.

T (215) 357 3911 F (215) 357 5232

Ordering: info.ET.Warminster@eurofinsus.com Technical Support:support.ET.Warminster@eurofinsus.com

Version: 01

Eurofins Abraxis 124 Railroad Drive Warminster, PA 18974 WEB: www.abraxiskits.com

Date this Flow Chart is effective: 03FEB2022

